RINSEAID

Drying Agent for Dishwashing Machines



RINSE AID is a concentrated rinse additive that *speeds up drying* and *improves the cleanliness* of washed crockery, glasses and cutlery by eliminating streaking and *preventing water spotting*.

By reducing the surface tension of the hot rinse water, **RINSE AID** makes the rinse water run off dishes and cutlery in even "sheets", so that droplets are not left behind to cause spots or slow down the drying stage.

Manual towel drying is *unnecessary* when **RINSE AID** is used.

Distributor Details:



